

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs or coffeemaker in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return appliance to manufacturer for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause hazards.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot burner, or in a heated oven.
11. Caution must be used when moving an appliance containing any hot liquid.
12. Always plug cord into wall outlet before turning any control on. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Make sure cover, coffee basket, percolating tube and cord are properly attached before coffeemaker is plugged in. Scalding may occur if lid is removed during brewing.
15. Remove and replace cover carefully.

SAVE THESE INSTRUCTIONS

CAUTION: Risk of fire and electrical shock. Replace only with manufacturer's cord set part #P30HC101. (Applies to coffee urns with detachable cord).

- 2 -

GENERAL INSTRUCTIONS

■ **WASH BEFORE USING** – Before using unit for the first time and after each use, wash coffee basket, percolating tube and interior of the coffeemaker with warm, soapy water. Rinse thoroughly and dry. Wipe exterior with a damp cloth – **NEVER IMMERSE BASE IN WATER.**

■ **MEASURE WATER** – Remove cover and basket assembly. Fill coffeemaker with fresh, cold water to desired fill line. Do not fill coffeemaker past top fill line. Never use hot water to make coffee.

■ **MEASURE COFFEE** – Measure appropriate amount of coffee (see chart below) into coffee basket and set coffee basket on percolating tube. Position bottom of percolating tube into heating well, but **DO NOT FORCE IT INTO PLACE.** Place cover on coffeemaker and turn to secure in place.

COFFEE MEASURING GUIDE

These are recommended amounts only – coffee strength can be adjusted to personal taste by adding or subtracting from these quantities.

CUPS (5 oz. serving)	GROUND COFFEE (8 oz. dry measure)
12-15	¼ cup
20-25	1½ cups
30-36	2 cups
40-45	2½ cups
50-55	3½ cups
60-65	4½ cups
80-85	5½ cups
95-100	6½ cups

1 lb. of coffee equals 5 cups.

Allow approximately 1 minute per cup brewing time. Voltage changes or variations in water temperature will affect brewing time. **NEVER MAKE LESS THAN THE MINIMUM CAPACITY OR MORE THAN THE MAXIMUM CAPACITY OF YOUR COFFEEMAKER.**

■ **TWIST-TO-SECURE COVER** – Before brewing, place cover on coffeemaker and turn to secure in handle slots. Note arrows on cover for correct turning. To remove cover, reverse procedure and lift.

■ **BEGIN BREWING** – Plug cord into any AC grounded outlet. **USE 110-120 VOLT ONLY.** On units featuring an ON/OFF switch, select the "ON" position to start brewing. All other models begin brewing as soon as they are plugged in. Coffeemaker stops perking automatically. Signal light glows when coffee is ready to serve. After brewing, coffeemaker automatically switches to low heat and will keep coffee at proper serving temperature until unit is unplugged or the ON/OFF switch is turned to "OFF". Before serving, turn cover to remove. Using a hot pad, remove coffee basket and percolating tube. If coffee basket and percolating tube are not removed, bitter oils from the extracted grounds will drip into the coffee. Replace cover making sure it is completely secured into handle slots. **NEVER** plug in coffeemaker without water or liquid coffee in it. This will damage the coffeemaker and void the warranty.

■ **SERVE** – Push or pull faucet and hold until cup is filled; release and it shuts off automatically. For continuous pouring (to fill large carafe or server), rotate knob one-half turn in either direction, and pull forward to "lock" into place. Lift knob to stop; rotate knob one-half turn to regular serving position.

- 3 -

HELPFUL HINTS

■ Never make less than the minimum capacity or more than the maximum capacity of your coffeemaker.

 
■ Do not use soft water as flooding of the coffee basket may occur.

■ Use regular electric perk grind coffee or coffee ground for all coffeemakers for best results. Do not use drip or finely ground coffee as flooding of the coffee basket can occur. If grinding your own coffee beans, grind to medium coarseness for best results. Do not grind to fine (powder-like) as this can cause coffee basket to flood.

■ Remove coffee basket and grounds as soon as the brewing cycle is completed. This also helps maintain coffee flavor. Use coffeemaker cover as a carrying tray when disposing of wet coffee grounds.

■ Before brewing a second pot, cool coffeemaker by rinsing it thoroughly with cold water.

■ If dripping occurs between the faucet and the coffeemaker body, tighten the nut inside the coffeemaker. If the dripping occurs from the faucet spout, tighten the faucet bonnet. If faucet continues to drip or is damaged, package the product securely and send it insured to Regal Ware, Inc. at the address shown on back.

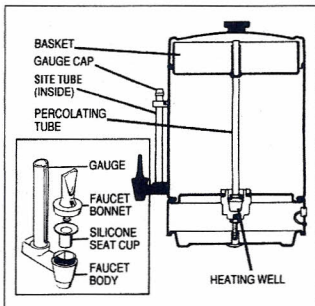

CAUTION:

- **USE ONLY WITH 110-120 VOLT AC GROUNDED OUTLET. NEVER USE ON 220 VOLT LINE OR DC.**
- **NEVER RUN UNIT DRY. LIQUID MUST ALWAYS COVER INSIDE BOTTOM OF UNIT TO AVOID DAMAGE.**
- **NEVER IMMERSE BASE IN WATER.**
- **CLEAN COFFEEMAKER REGULARLY.**

CARE AND CLEANING INSTRUCTIONS

■ **BEFORE USING FOR THE FIRST TIME AND AFTER EACH USE**, wash coffee basket, percolating tube and interior of the coffeemaker with warm, soapy water. **DO NOT IMMERSE BASE IN WATER.** Rinse thoroughly with warm water and dry. Wipe exterior with a damp cloth and dry. Before cleaning, unplug unit and pour out any remaining coffee.

■ **TO CLEAN COVER.** Coffee stains on underside of cover may be removed by scouring with a damp cloth and a non-abrasive cleanser.

■ **CLEAN FAUCET AFTER EACH USE.** Clean faucet after each use by pouring hot water into coffeemaker and running through faucet.

■ **PERCOLATING TUBE SHOULD BE FREQUENTLY CLEANED** with a long, narrow brush to remove mineral deposits which may impair the unit's operation. The oily coffee residue will also affect the flavor of the next pot of coffee.

 
■ **HEATING WELL OF COFFEEMAKER SHOULD BE SCOURED.** Heating well of coffeemaker should be cleaned thoroughly with an abrasive pad. (For larger units, a cleaning tool has been provided.) Rinse thoroughly and dry. This cleaning will remove mineral deposits which may affect the coffeemaker's operation and eventually cause the percolating tube to stick in the heating well and break.

■ **TO REMOVE DISCOLORATIONS.** To remove discolorations caused by coffee stains, oils and mineral deposits, clean inside of coffeemaker frequently by filling unit to top fill line with cold water. Add ¼ cup cream of tartar, insert percolating tube and the empty coffee basket. Cover unit and plug into wall outlet. When brewing cycle is completed, unplug unit, allow it to cool and discard contents. Wash and rinse coffee basket, percolating tube and inside of coffeemaker thoroughly. If coffeemaker is used daily, this procedure should be followed every two weeks.


■ **TO REMOVE MINERAL DEPOSITS.** If the coffeemaker is used daily, a special cleaning every 2 weeks is necessary. Fill coffeemaker with 1 quart each of water and distilled vinegar. (If a white mineral buildup has formed inside the unit, use an additional 2 cups of vinegar.) Place percolating tube and empty coffee basket in place, secure cover and plug in. Allow coffeemaker to complete perking cycle, then let stand 10 - 15 minutes. Unplug and drain coffeemaker. Allow to cool and follow general cleaning instructions.

WARNING: If cleaning instructions are not followed, operation of this unit may be seriously impaired.

Do not wash coffeemaker parts in an automatic dishwasher.



Clean heating well with scouring pad.

 

For large units, clean heating well using scouring pad and cleaning tool.

CAUTION: Liquid must cover inside bottom of unit at all times. Falling below this level (approx. 2 inches) could cause overheating and damage to internal components. This will void warranty.

- 4 -

- 5 -